

# MONOPRICE®

## Instruction Guide and Owner's Manual

### ■ Speaker Volume Controller

---

MVR series • MVL series

#### Connecting the Volume Control

- Step #1 Strip about 1/4" of the insulation off the ends of all wires.  
*Twist the exposed ends to eliminate loose strands.*
- Step #2 Connect the leads from the Receiver/ Amplifier to the volume control connector labeled "INPUT". Insert the LEFT L(+) and L(-) into the corresponding openings. Tighten the screws firmly, making sure that the exposed wire is engaged, not the insulation!
- Step #3 Repeat process while connecting R(+) and R(-) wires from the amplifier.
- Step #4 Connect the speaker wire to the connector labeled "OUTPUT". *Observe channel and polarity output.*
- Step #5 Install the completed volume control into the junction box. Insert carefully to restrain on the connectors.