




ASSEMBLY INSTRUCTION

neutriCON | Cable Connector

Standard & Crimp Version SR8 A/B

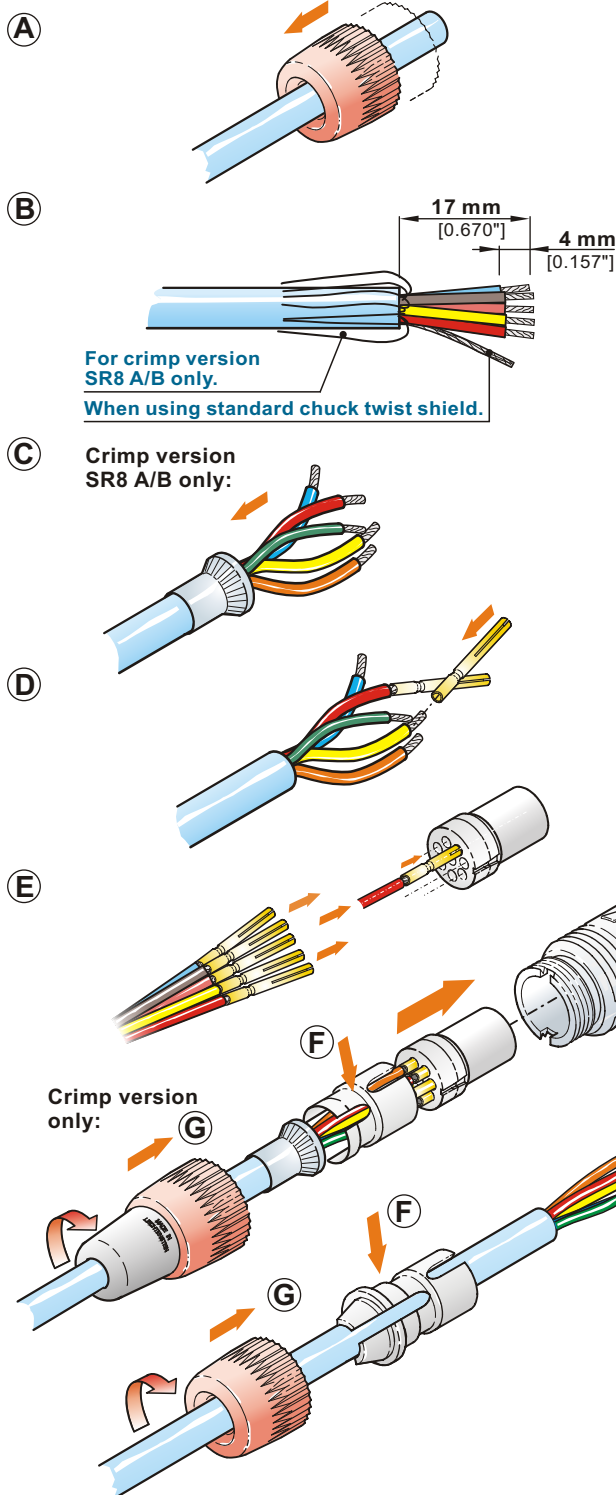



- (A) Put the bushing onto the cable.
- (B) Prepare cable as shown.
- (C) Crimp version only:
Fold back the shield.
Slide crimp ferrule onto the cable.
- Use our HX-R-BNC crimp tool with the appropriate die (see ordering info) to crimp the ferrule.
- (D) Wire contacts:
• Solder standard contacts.
• For crimp contacts (BC 1, PC 1) use our HX-CONTACT crimp tool with the appropriate positioner (see ordering info).

- (E) Snap contacts into insert.

Contact Arrangement:

Male

Female

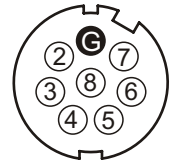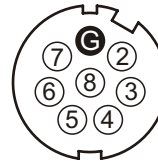

- (F) Press chuck onto cable.
- (G) Slide insert and chuck into the housing and fasten the bushing.

Same procedure for MC & SC housing with female or male inserts!

NEUTRIK AG LI T: +423/237 24 24 F: +423/232 53 93
NEUTRIK USA Inc. USA T: +1 704/972 3050 F: +1 704/438 9202
NEUTRIK (UK) Ltd. UK T: +44 1983/811 441 F: +44 1983/811 439
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131/280 890 F: +49 8131/280 830

NEUTRIK France FR T: +33 1/4131 6750 F: +33 1/4131 0511
NEUTRIK Tokyo Ltd. JP T: +81 3/3663 4733 F: +81 3/3663 4796
NEUTRIK Hong Kong Ltd. HK T: +852/2687 6055 F: +852/2687 6052
NEUTRIK India Pvt. Ltd. IND T: +91/982 05 43 424 F: +91/22 26163 540

Draft. Nr.: BDA 124 / 3102M1221 | Update: 04.12.2013 | Data subject to change without prior notice. ©2013 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.

www.neutrik.com

NEUTRIK