
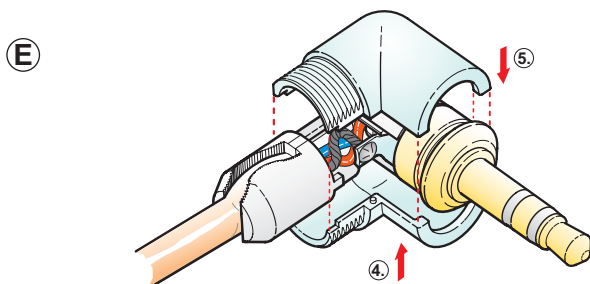
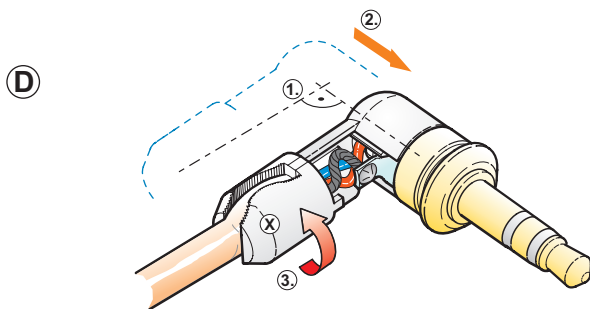
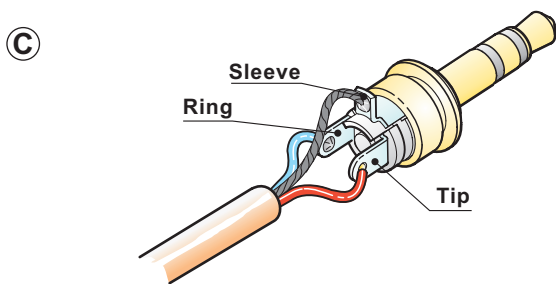
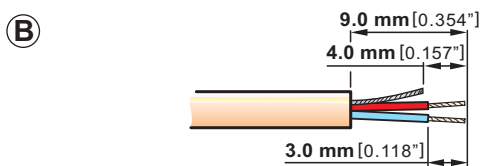


NEUTRIK® Tiny Plug

3.5 mm right-angle stereo plug

Assembly Instructions

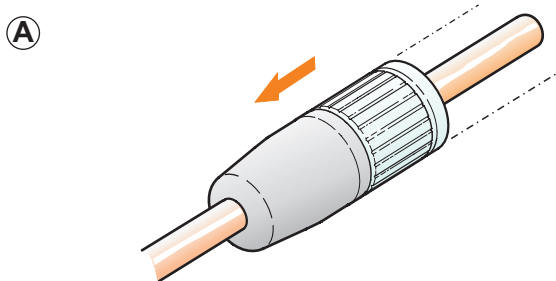

A Slide the boot onto the cable.

B Prepare cable as shown.


C Solder the wire ends .

D Assembly of strain relief:

- ① Bend cable by 90° towards the sleeve contact.
- ② Position the chuck on the connector body.
- ③ Close the strain relief
(break away part (X) if cabel O.D. > 3.2 mm)

E Place the shell halves onto the connector body.

F Slide the bushing up to the thread and tighten it.

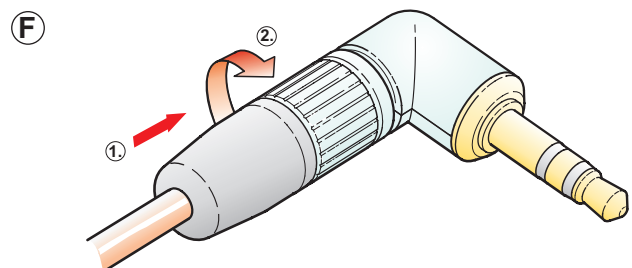

NEUTRIK AG
Liechtenstein
Tel.: +423/237 24 24
Fax: +423/232 53 93
www.neutrik.com

NEUTRIK Zürich AG
Switzerland
Tel.: +41 1/736 5010
Fax: +41 1/736 5011

NEUTRIK (UK) Ltd.
Great Britain
Tel.: +44 1983/811 441
Fax: +44 1983/811 439

NEUTRIK USA INC.
USA
Tel.: +1 732/901 9488
Fax: +1 732/901 9608

NEUTRIK Tokyo Ltd.
Japan
Tel.: +81 3/3663 4733
Fax: +81 3/3663 4796

NEUTRIK France
France
Tel.: +33 1/4131 6750
Fax: +33 1/4131 0511

NEUTRIK Vertriebs GmbH
Germany / Netherlands
Tel.: +49 8131/28 08 90
Fax: +49 8131/28 08-30

Draft. Nr.: BDA 128 / 3102M1241
Update: 02.09.2003

Data subject to change without prior notice. ©2003 NEUTRIK®. ALL RIGHTS RESERVED.



NEUTRIK®
CONNECTING THE WORLD