

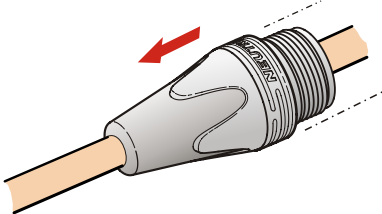
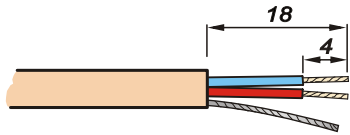
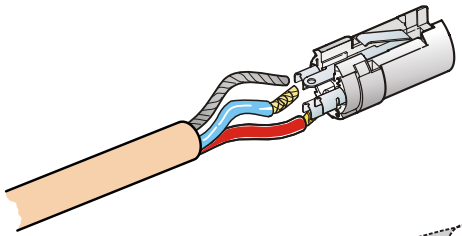
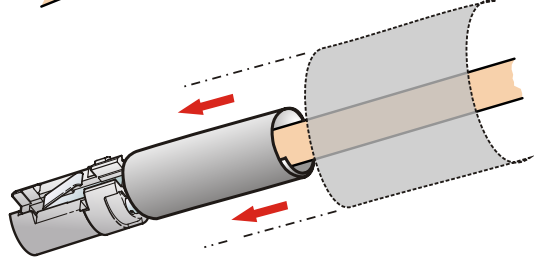
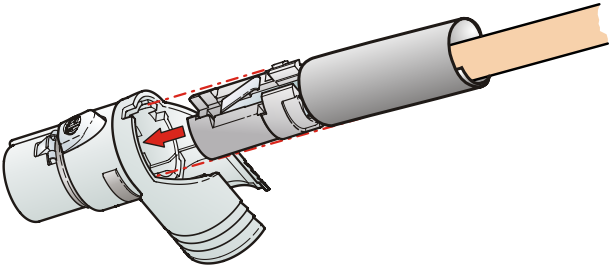
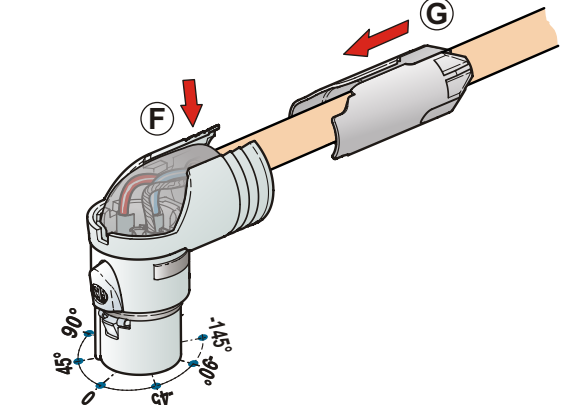


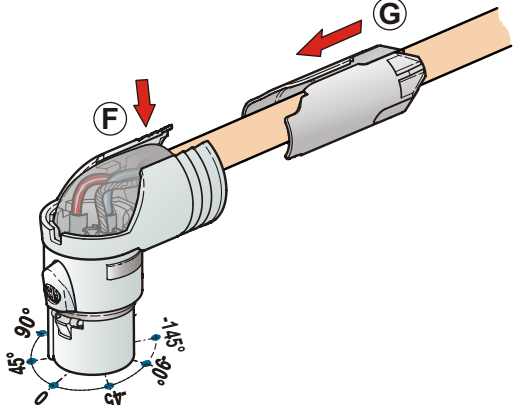

ASSEMBLY INSTRUCTION

NC*FRX & NC*MRX | XLR Cable Connector

- A** Slide the boot onto the cable.
- B** Prepare cable as shown.
- C** Insert wires into the terminals and solder them.
- D** Position the sleeve over the cables.
- E** Slide insert into the housing until it snaps in.
Align insert with housing.
- F** Position the cable.
- G** Slide the chuck into the housing.
Pay attention to position chuck as shown.
- 
- 
- 
- 
- 
- 
- 
- 90° 45° 0° 45° 90° 145° 30°

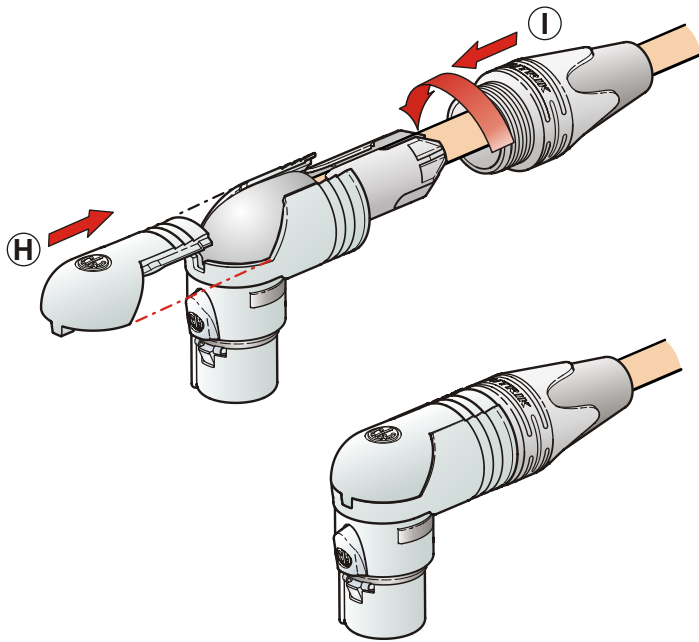


H Position the cover.

Before placing the cover choose the orientation of cable outlet by turning housing.

I Finish the assembly by turning the bushing onto the connector.

Disassembly of the insert

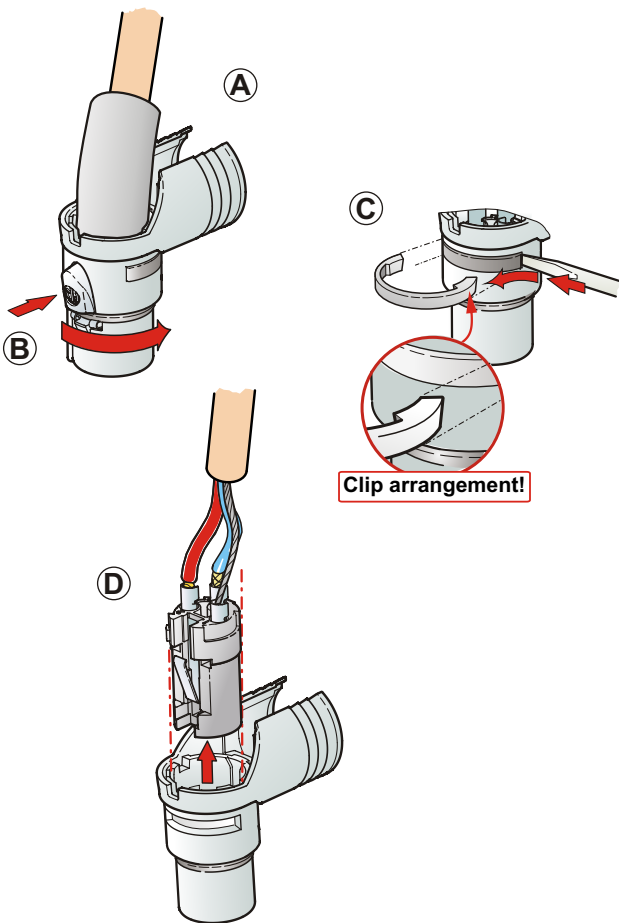

A Remove cover and chuck.

B Push latch and turn housing approx. a half turn until housing can be separated.

C Lift the locking clip by help of a screw driver.

D Remove insert.