





# ASSEMBLY INSTRUCTION

## NC3FD-LX-HA | DLX Serie - Crimp XLR Chassis Connector

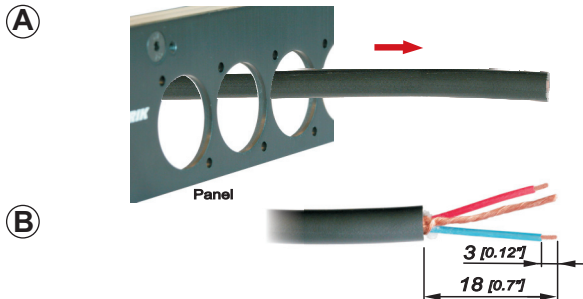

**(A) ATTENTION:**  
Cable length protruding the panel should give enough space for crimp operation.


**(B) Prepare cable as shown (twist the screen).**

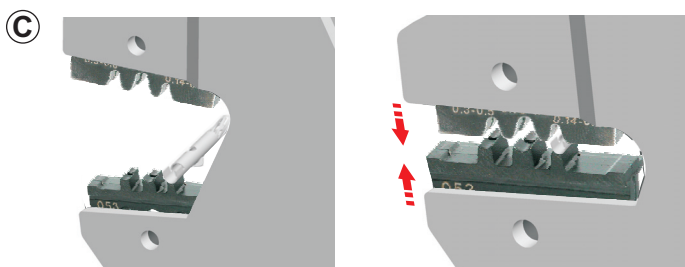

**(C) Position a contact in the die and hold the contact by pressing the tool slightly together - DO NOT CRIMP!**

**(D) Position the wire in the contact & crimp it.**


Repeat steps C, D, E for the remaining two contacts.

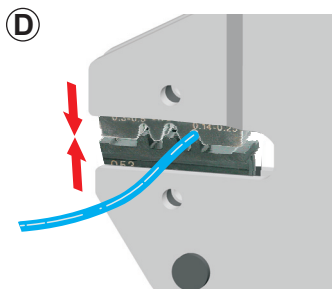

**(E) Push the crimped contacts into the insert until you notice a snap.**

Attention:  
Align lug to the top!  
Pay attention to correct wiring!


PIN 1 ... Screen  
PIN 2 ... Hot, +  
PIN 3 ... Cold, -

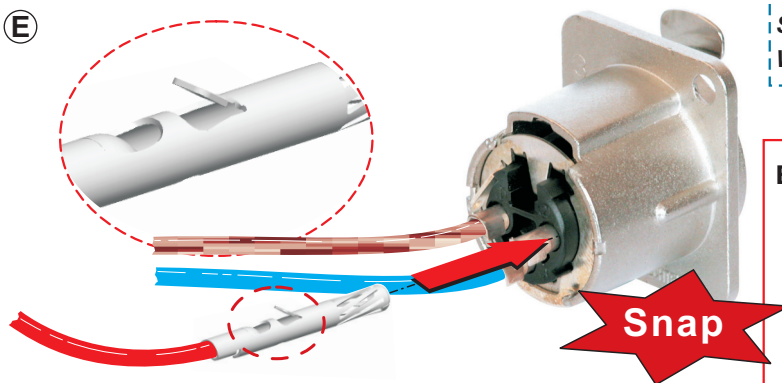


**(F) Position the connector in the panel and fasten it.**

Standard crimp according IEC 60352-2 (B crimp).  
Wire size AWG 22 - 24, 0.22 - 0.34 mm<sup>2</sup>.

### EXTRACTION OF CONTACT

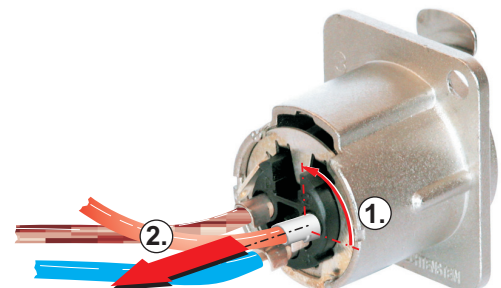


1. Turn the contact 90°
2. Pull the contact out of the insert
3. Insert new Contact

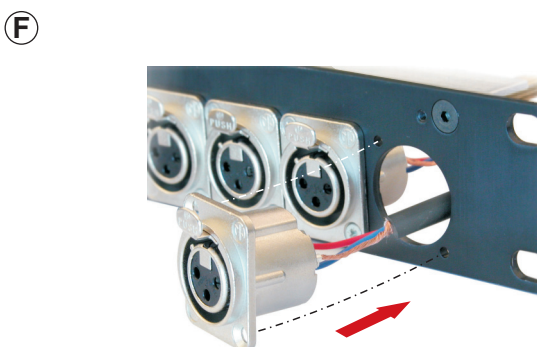



# ASSEMBLY INSTRUCTION

## NC3MD-LX-HA | DLX Serie - Crimp XLR Chassis Connector

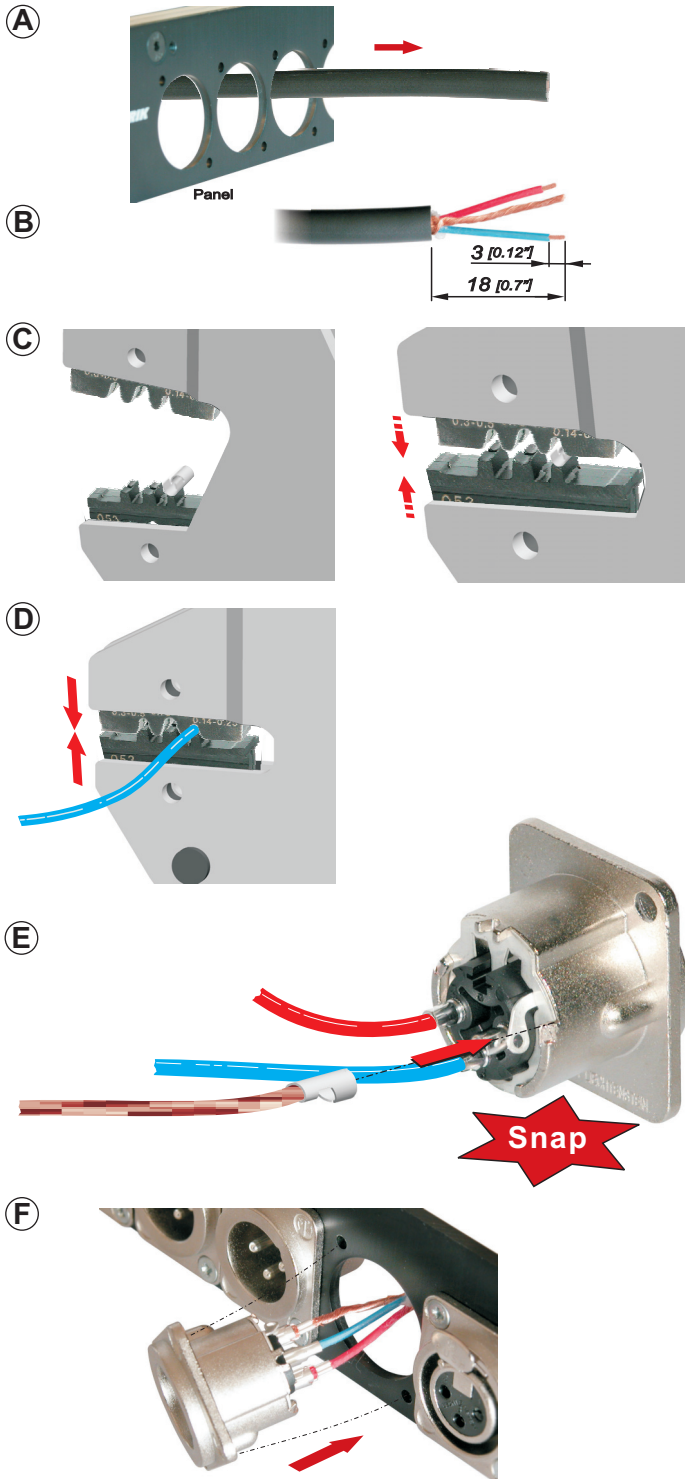

- (A) ATTENTION:**  
Cable length protruding the panel should give enough space for crimp operation.
- (B)** Prepare cable as shown (twist the screen).
- (C)** Position a contact in the die and hold the contact by pressing the tool slightly together - **DO NOT CRIMP!**

- (D)** Position the wire in the contact & crimp it.

Repeat steps C, D, E for the remaining two contacts.

- (E)** Push the crimped contacts into the insert until you notice a snap.

**Attention:**  
Align lug to the top!  
Pay attention to correct wiring!

**PIN 1 ... Screen**  
**PIN 2 ... Hot, +**  
**PIN 3 ... Cold, -**

- (F)** Position the connector in the panel and fasten it.

Standard crimp according IEC 60352-2 (B crimp).  
Wire size AWG 22 - 24, 0.22 - 0.34 mm<sup>2</sup>.

NEUTRIK AG	LI	T: +423 / 237 24 24	F: +423 / 232 53 93	NEUTRIK Vertriebs GmbH	DE/NL/AT	T: +49 8131 / 280 890	F: +49 8131 / 280 830
NEUTRIK Zürich AG	CH	T: +41 44 / 736 5010	F: +41 44 / 736 5011	NEUTRIK France	FR	T: +33 1 / 4131 6750	F: +33 1 / 4131 0511
NEUTRIK USA Inc.	USA	T: +1 732 / 901 9488	F: +1 732 / 901 9608	NEUTRIK Tokyo Ltd.	JP	T: +81 3 / 3663 4733	F: +81 3 / 3663 4796
NEUTRIK (UK) Ltd.	UK	T: +44 1983 / 811 441	F: +44 1983 / 811 439	NEUTRIK Hong Kong Ltd.	HK	T: +852 / 2687 6055	F: +852 / 2687 6052