



®

CAT5-1600A Extender

EXT-CAT5-1600A

User Manual



www.gefen.com

ASKING FOR ASSISTANCE

Technical Support:

Telephone (818) 772-9100
(800) 545-6900

Fax (818) 772-9120

Technical Support Hours:

8:00 AM to 5:00 PM Monday thru Friday Pacific Time

Write To:

Gefen, LLC
c/o Customer Service
20600 Nordhoff St
Chatsworth, CA 91311

www.gefen.com
support@gefen.com

Notice

Gefen, LLC reserves the right to make changes in the hardware, packaging and any accompanying documentation without prior written notice.

CAT5-1600A Extender is a trademark of Gefen, LLC

© 2011, Gefen, LLC. All rights reserved.
All trademarks are the property of their respective owners.

CONTENTS

- 1 Introduction
- 2 Operation Notes
- 3 Features
- 4 Sender Unit Layout
- 5 Sender Unit Descriptions
- 6 Receiver Unit Layout
- 7 Receiver Unit Descriptions
- 8 Connecting the CAT5-1600A Extender
- 9 DIP Switch Configuration
- 12 Network Cable Wiring Diagram
- 13 Specifications
- 14 Warranty

INTRODUCTION

Congratulations on your purchase of the CAT5-1600A Extender. Your complete satisfaction is very important to us.

Gefen

Gefen delivers innovative, progressive computer and electronics add-on solutions that harness integration, extension, distribution and conversion technologies. Gefen's reliable, plug-and-play products supplement cross-platform computer systems, professional audio/video environments and HDTV systems of all sizes with hard-working solutions that are easy to implement and simple to operate.

The Gefen CAT5-1600A Extender

The Gefen CAT5-1600A extends VGA, Audio, and USB up to 330 feet (100 meters) using CAT-5 cables. Display resolutions up to 1920x1200 are supported. A local monitor can be connected to the Sender unit and up to two monitors can be connected to the Receiver unit. Four USB connectors on the Receiver unit allow control of the computer system from a KVM workstation. Mini-stereo connectors extend analog audio. A power-saving "Green Mode" can be set via DIP switches on the Sender and Receiver. When activated, both units will go into low-power Standby Mode when the Sender's VGA input signal disappears.

How It Works

Place the Sender unit next to the VGA source. Use the included VGA cable to connect the source to the Sender unit. Optionally connect a local monitor to the Sender unit using another VGA cable. Connect up to two monitors to the Receiver unit with VGA cables. Connect the USB devices to the input and output connectors. For audio, connect a mini-stereo cable between the audio source and the audio input on the Sender unit. Connect a mini-stereo cable between the audio output on the Receiver unit and the audio device. Use two CAT-5 cables to connect the Sender unit to the Receiver unit.

To power-on the units, connect the locking power supplies and plug them into available electrical outlets. The computer can now be controlled from the KVM workstation.

OPERATION NOTES

READ THESE NOTES BEFORE OPERATING THE CAT5-1600A EXTENDER

- The CAT5-1600A extends VGA and Audio up to 1000 feet (300 meters).
- CAT-5 cables should not exceed 330 feet (100 meters) when extending USB.

FEATURES

Features

- Extends analog video (VGA) and analog audio up to 1000 ft. (300 meters) over two CAT-5 cables.
- Extends USB 2.0 up to 330 feet (100 meters)
- Supports resolutions up to 1920 x 1200
- Supports USB 2.0 at up to 480 Mbps transfer rate
- Reads EDID of both remote and local monitor
- Backward-compatible with USB 1.1 devices
- Green Mode saves power when VGA source is absent
- Supports any Operating System (OS)
- Color, brightness, and focus controls
- Adjustable phase-shift knob for RGB colors
- Locking power supplies
- Rack-mountable

Package Includes

- (1) CAT5-1600A Extender - Sender Unit
- (1) CAT5-1600A Extender - Receiver Unit
- (1) 6 ft. VGA Cable (M-F)
- (1) 6 ft. USB Cable (A-B)
- (1) 6 ft. Mini-Stereo Cable (3.5 mm)
- (2) 5V DC Locking Power Supplies
- (1) Quick-Start Guide

SENDER UNIT LAYOUT

Front



1

Back



2

3

4

5

6

7

8

9

SENDER UNIT DESCRIPTIONS

1 Power Indicator

This LED will turn RED once the locking power supply has been properly connected. When the CAT-5 link is established between the Sender and Receiver units, the LED will be GREEN. When the Sender unit is in Standby Mode or Power Saving Mode, this LED will be RED. (Power Saving Mode is covered in detail on page 9).

2 5V DC Locking Power Connector

Connects the included 5V DC Locking Power Supply to this receptacle.

3 VGA Input (HD15 Connector)

Connect the VGA source to this port.

4 Local Monitor Output (HD15 Connector)

Connect a VGA monitor to this port.

5 Audio Input Connector (3.5mm Mini-Stereo)

Connect analog audio here via a 3.5 mm audio jack.

6 CAT-5 Video Output Jack (RJ-45 Connector)

Connects the Sender unit to the Receiver Unit using CAT-5 cable. Used to extend the video signal to the Receiver Unit.

7 USB Input Port (USB type "B")

Connect a Computer or USB device to this port.

8 Host Indicator

This LED will turn GREEN when the power and all devices are connected to the Sender unit. The LED will turn RED if a USB device or monitor has been disconnected from the Sender unit.

9 CAT-5 USB Link Output (RJ-45 Connector)

Connects the Sender unit to the Receiver unit using CAT-5 cable. Used to extend the USB device from the Sender Unit to the Receiver Unit.

RECEIVER UNIT LAYOUT

Front



Back



RECEIVER PANEL DESCRIPTIONS

1 RGB Equalization Trim Pots (Trim Potentiometers)

Adjusts the Red, Green, and Blue color components to correct color convergence / divergence due to varying distances and/or skew variations found in different brands of CAT-5 cable. Turn the controls to achieve the best color and picture. See page 11 for details.

Note: When turning the Trim Pots, use a small screwdriver or an electronic device adjustment tool (available at electronics stores). Use gentle force when rotating Trim Pot controls. Turn controls in both directions if necessary to get best results. Never force a control if resistance is encountered. Gefen is not responsible for inoperable units due to broken trim pot controls.

2 Brightness Trim Pot

Adjusts the brightness of the picture.

3 Focus Trim Pot

Adjusts the focus of the picture.

4 Power Indicator LED

This LED will turn RED once the locking power supply has been properly connected. When the CAT-5 link is established, the LED will be GREEN. When the Receiver unit is in Standby Mode or Power Saving Mode, this LED will be RED. (Power Saving Mode is covered in detail on page 9).

5 5V DC Locking Power Connector (threaded jack on rear left of Receiver)

Connects the included 5V DC Locking Power Supply here. Screw in the locking power connector with hand force only until it stops turning. Do not overtighten.

6 VGA Outputs (2 x HD15 Connectors)

Connect VGA monitors to these ports.

7 Audio Output Connector (3.5mm Mini-Stereo)

Connect the audio from this port to an analog audio amplifier.

8 CAT-5 Video Link Input (RJ-45 Connector)

Connects the Sender unit to the Receiver unit using CAT-5 cable. Used to receive the video signal from the Sender Unit.

9 USB Ports (4 x USB 2.0 type "A")

Connect the USB devices (keyboard, mouse device, etc.) to these ports. The CAT5-1600A Receiver functions as a 4-port USB 2.0 Hub.

10 CAT-5 USB Link Input (RJ-45 Connector)

Receives the USB signals from the Sender Unit. Connects to the Receiver unit via a length of CAT-5 cabling.

11 Host Indicator

This LED will turn GREEN when the power and all devices are connected to the Sender unit. The LED will turn RED if a USB device or monitor has been disconnected from the Sender unit.

CONNECTING THE CAT5-1600A EXTENDER


How to Connect the CAT5-1600A

1. Connect the Sender Unit to the computer using the included VGA and USB cables. If audio is being used, connect the included 3.5mm mini-stereo cable between the audio source and the audio input on the Sender Unit.
2. Connect the local VGA monitor to the Local Monitor output on the Sender Unit.
3. Place the Receiver Unit near the KVM workstation and connect the display, mouse, keyboard, printer and any other USB devices to the Receiver Unit. Up to four (4) USB devices can be connected to the Receiver Unit.

NOTE: USB has a maximum extension distance of 330 feet (100 meters).

4. Using two CAT-5 cables, connect a CAT-5 cable between the **Link** connector on the Sender Unit and the **Link** connector on the Receiver Unit. Connect another CAT-5 cable between the **USB Link** connector on the Sender Unit and the **USB Link** connector on the Receiver Unit.
5. Connect the 5V DC locking power supplies to both the Sender Unit and the Receiver Unit. Do not overtighten the locking connectors. Plug the power cords into any available wall outlets.

Wiring Diagram for the CAT5-1600A Extender

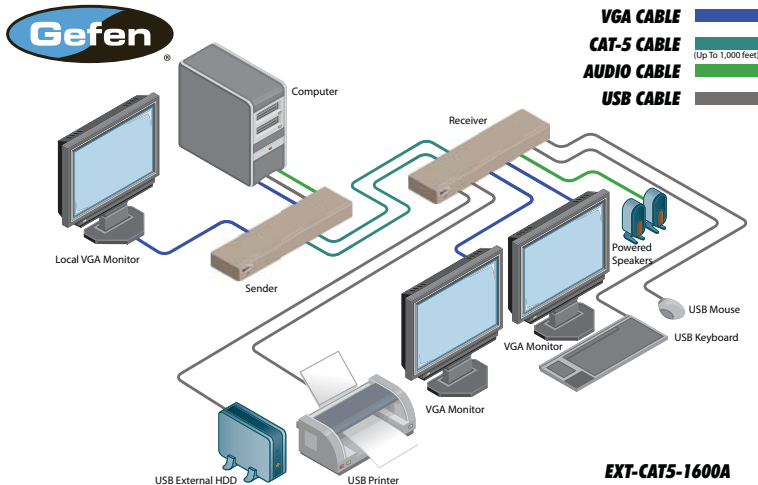

ATTENTION: This product should always be connected to a grounded electrical socket.

DIP SWITCH CONFIGURATION

Sender Unit

The CAT5-1600A contains two (2) DIP switches on the bottom of the Sender Unit and the Receiver Unit. The follow information outlines the functionality of each DIP switch:



The two DIP switches on the bottom of the Sender Unit.

DIP Switch 1 - Green Mode (Default = ON)

- **OFF** - Enable Green Mode

If DIP switch 1 is set to the OFF position, then the product is will be placed in “Green Mode”. This means that the unit will not power the USB if the USB cable from the Sender to the computer source is disconnected. In “Green Mode”, the product consumes less than 1 watt of power.

- **ON** - Disable Green Mode

When DIP switch 1 on the Sender Unit is set to the ON position, “Green Mode” is disabled. This means that the USB is always powered whether or not there is a signal. This mode will allow the computer to wake up when it is placed in sleep mode.

DIP Switch 2 - Not Used

- Reserved for future expansion.



NOTE: DIP switch 1 on *both* the Sender Unit and the Receiver Unit must be set to the OFF position in order to operate in “Green Mode”.

DIP SWITCH CONFIGURATION

Receiver Unit

The CAT5-1600A Receiver Unit contains two (2) DIP switches on the bottom of the unit. A single trim pot (potentiometer) is also located next to the DIP switch bank. The follow information outlines the functionality of each DIP switch and the trim pot:



The two DIP switches and single trim pot on the bottom of the Receiver Unit.

DIP Switch 1 - Green Mode (Default = ON)

- **OFF** - Enable Green Mode

If DIP switch 1 is set to the OFF position, then the product is will be placed in “Green Mode”. This means that the unit will not power the USB if the USB cable from the Sender to the computer source is disconnected. In “Green Mode”, this product consumes less than 1 watt of power.

- **ON** - Disable Green Mode

When DIP switch 1 is set to the ON position, “Green Mode” is disabled. This means that the USB is always powered whether or not there is a signal. This mode will allow the computer to wake up when it is placed in sleep mode.



NOTE: DIP switch 1 on *both* the Sender Unit and the Receiver Unit must be set to the OFF position in order to operate in “Green Mode”.

DIP SWITCH CONFIGURATION

DIP Switch 2 - EDID Mode (Default = OFF)

- **OFF** - Pass-Through Mode

If DIP switch 2 is OFF, then the downstream EDID information is copied to the input.

- **ON** - Local EDID


When DIP switch 2 is set to the ON position, then the EDID is copied from the Local Monitor output on Sender Unit.

Trim Pot - Pole Frequency

This trim pot is used to adjust the brightness and focus of the picture.


1. Insert a small flat-headed tool into the EQ trim pot located on the bottom of the Receiver Unit.
2. The trim pot has 8 set positions. Turn the trim pot clockwise until it clicks into the next position. Continue adjusting the trim pot until the issue is resolved.
3. Carefully remove the adjustment tool.

NETWORK CABLE WIRING DIAGRAM

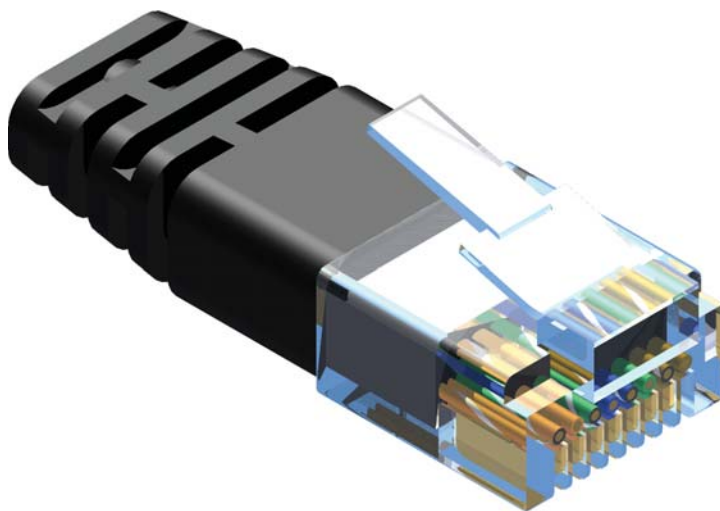

Gefen recommends the TIA/EIA-568-B wiring option. Please adhere to the table below when field-terminating the CAT-5 cable for use with Gefen products.

Pin	Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown

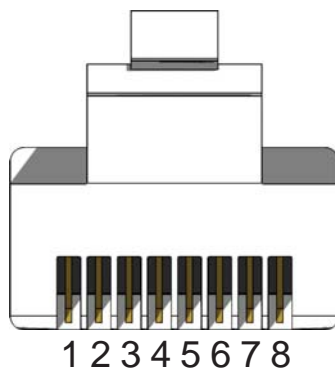

CAT-5 cabling comes in stranded and solid core types. Gefen recommends using solid core cabling.

It is recommended to use one continuous run from one end to the other. Connecting through a patch is not recommended.

SPECIFICATIONS

Video Amplifier Bandwidth	350 MHz
Horizontal Frequency Range	15 kHz - 70 kHz
Vertical Frequency Range	30 kHz - 170 kHz
Video Input Connector (Sender).....	(1) VGA HD-15, male
Video Monitor Output Connector (Sender).....	(1) VGA HD-15, female
Video Output Connectors (Receiver).....	(2) VGA HD-15, female
Audio Input Connector (Sender).....	(1) 3.5 mm mini-stereo jack
Audio Output Connector (Receiver).....	(1) 3.5 mm mini-stereo jack
Link Connector (Sender / Receiver).....	(1) RJ-45, Shielded
USB Host Connector (Sender).....	(1) USB Type B, female
USB Device Connectors (Receiver).....	(4) USB Type A, female
Power Supplies (Sender / Receiver).....	5V DC, Locking
Power Consumption.....	20W (max.) per unit
Operating Temperature.....	0 - 40 °C
Dimensions (Sender / Receiver)(W x H x D).....	17" x 1.7" x 5.3" (432mm x 43mm x 135mm)
Shipping Weight.....	8 lbs. (3.6 kg)

WARRANTY

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

1. Proof of sale may be required in order to claim warranty.
2. Customers outside the US are responsible for shipping charges to and from Gefen.
3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, refer to the Warranty and Return Policy under the Support section of the Gefen Web site at www.gefen.com.

PRODUCT REGISTRATION

Please register your product online by visiting the Register Product page under the Support section of the Gefen Web site.



20600 Nordhoff St., Chatsworth CA 91311
1-800-545-6900 818-772-9100 fax: 818-772-9120
www.gefen.com support@gefen.com



This product uses UL listed power supplies.